

Waferstudio Installation

1. Download Waferstudio from the E+H website:

www.eh-metrology.com/products/software/waferstudio/download-demo-of-waferstudio.html

Download Evaluation Copy of




[Click here to start download of V1.12...](#)

2. Start the installation by executing the downloaded file (Waferstudio_Install.exe) and follow the instructions
3. Click on "Register Licence" if you bought a licence of Waferstudio
Authorized distributors are listed on
www.eh-metrology.com/products/software/waferstudio/where-to-buy-waferstudio.html

To test Waferstudio click on "Run Waferstudio as Demo"



4. After you have received the serial number you can start the registration.
Click on "Next" to start the registration

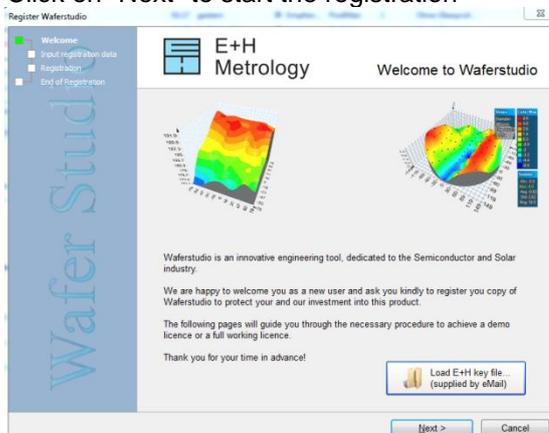

5. Fill in the form, type your preliminary key

6. Click on "next" and choose "Store registration file to disk...."

7. Send the Waferstudio_XXXX.LRQ file to support@eh-metrology.com

8. After your licence was activated by E+H, you will receive a key-file. Click "Load E+H key file..." select your key file.

9. Run your full version of Waferstudio